

DXDSUB-SL

Installation

Installation av DXDSUB-SL kabel till kommunikationskort DX232 eller DX485

Ingående delar:

- A. DXDSUB-SL kabel
- B. Skruv
- C. Låsbricka

Installation of DXDSUB-SL cable to communication board DX232 or DX485



Parts list:



- A. DXDSUB-SL cable
- B. Screw
- C. Lock washer

Installation des DXDSUB-SL Kabels an Kommunikationskarte DX232 oder DX485

Bestandteile:

- A. DXDSUB-SL Kabel
- B. Schraube
- C. Steckscheibe

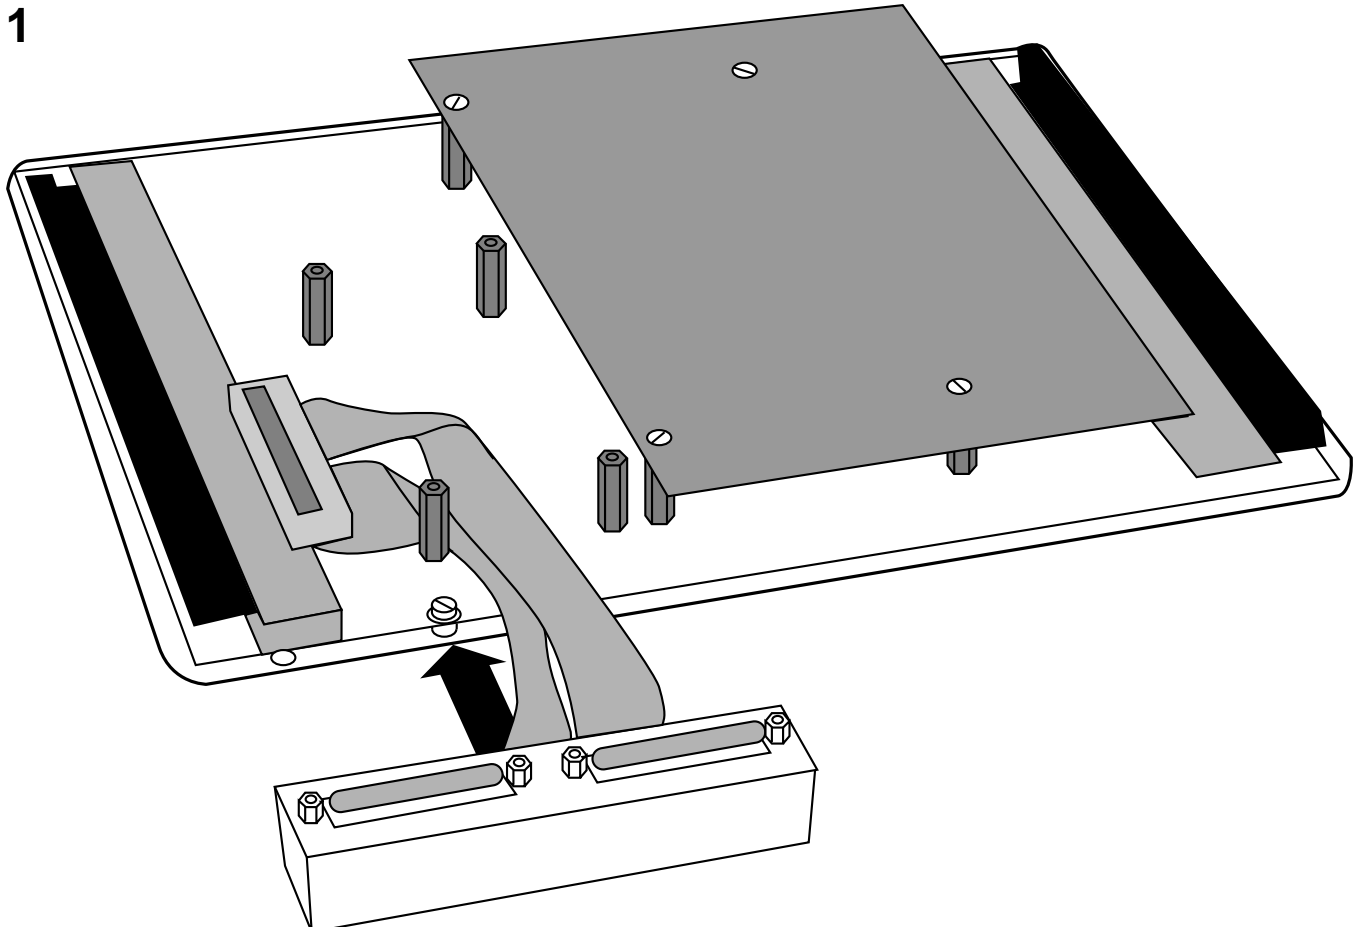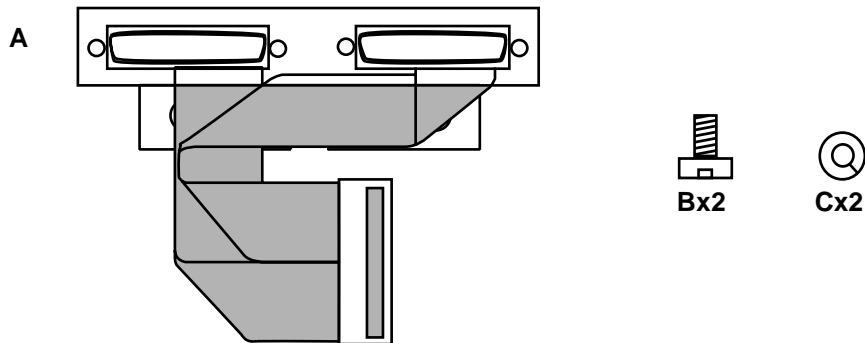

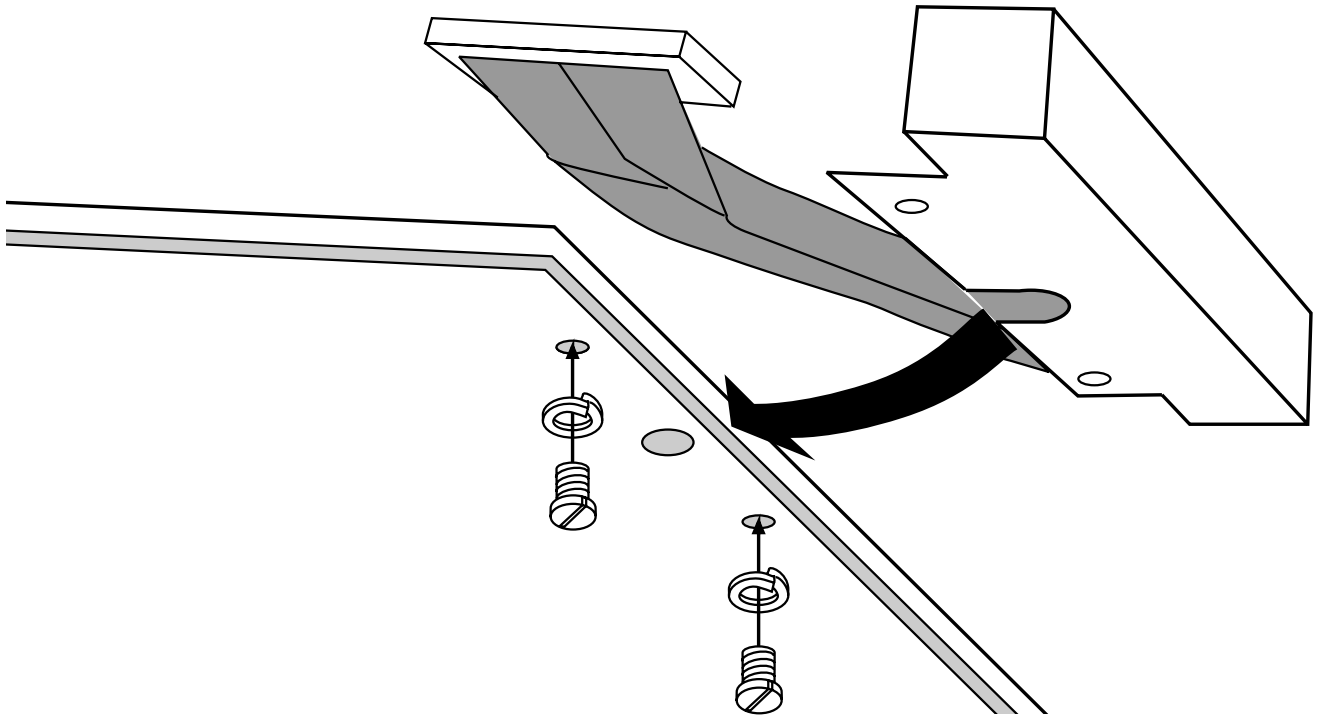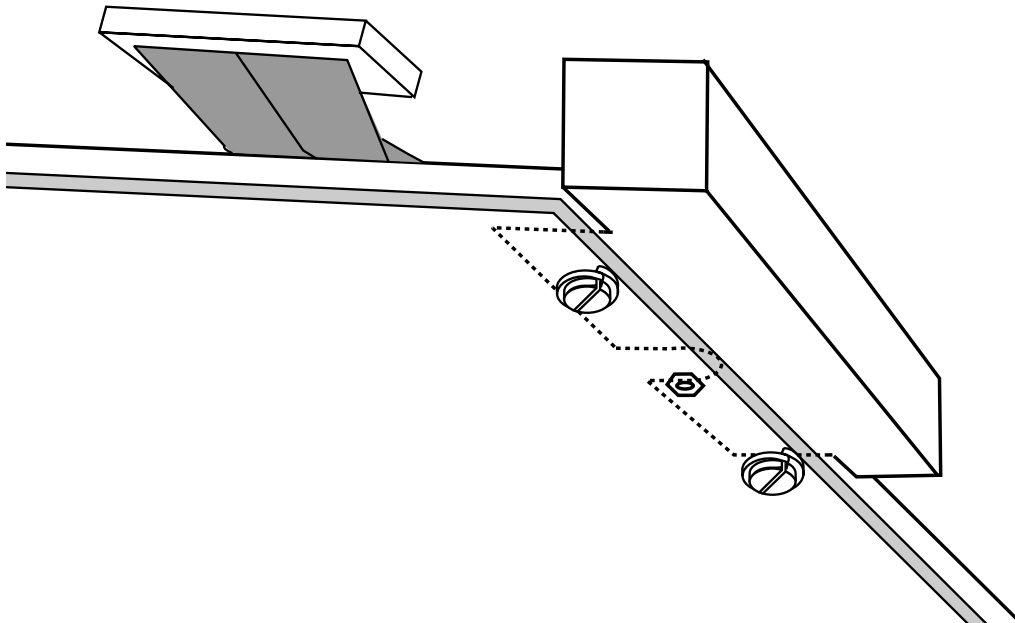2**3****4**

Kommunikationskort ansluts till centralenhetskortet enligt anvisningar i manualen "SattCon 05 Slimline Installation och underhåll". Se även denna manual för övrig information.

The communication board is installed on control board as described in the manual "SattCon 05 Slimline, Installation and maintenance". See also this manual for further information.

Die Kommunikationskarte wird gemäß dem Handbuch "SattCon 05 Slimline, Installation und Wartung" an die Zentraleinheit angeschlossen. Siehe auch dieses Handbuch für übrige Information.